




# Removing Philips DC320 37 Bottom Panel

This guide covers the removal of the bottom panel.

Written By: Greg Lane

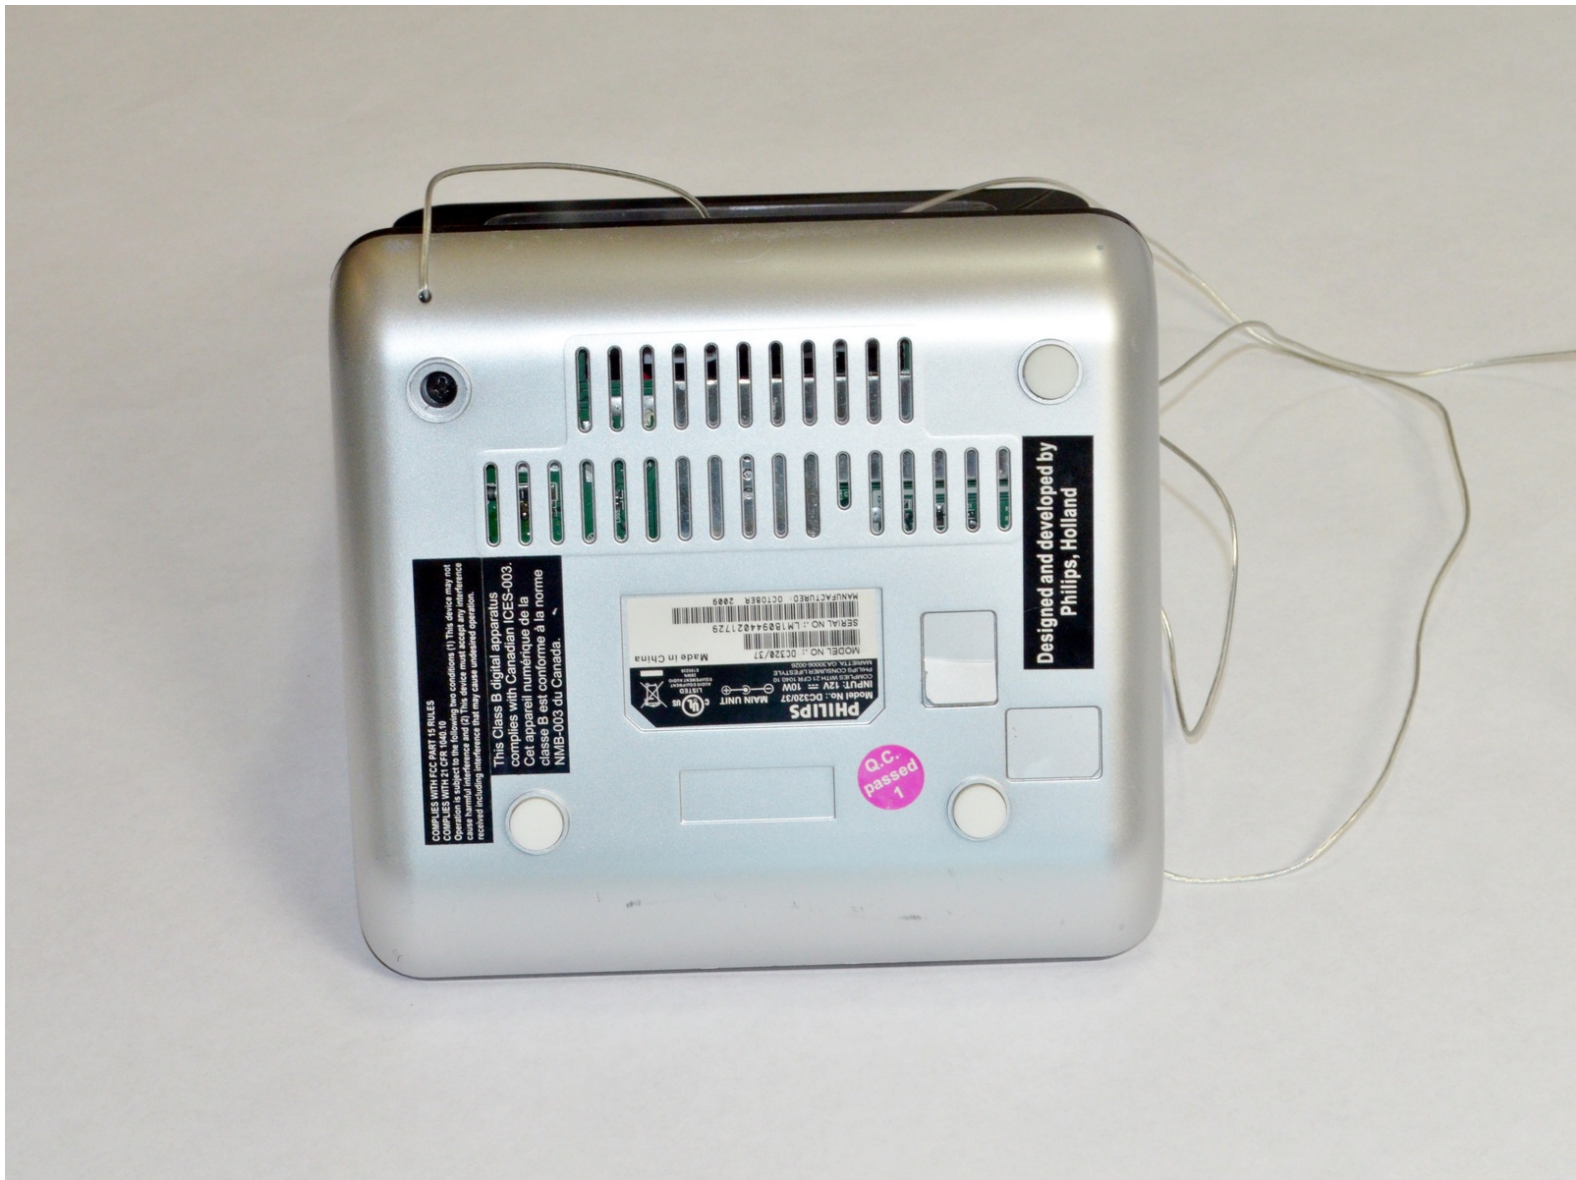

## INTRODUCTION

Use this guide to open the dock and install other components.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Bottom Panel



- Pry off the four white feet with the pointed end of the spudger

## Step 2



- Unscrew the four 15.5 mm Phillips #2 screws that hold the bottom panel to the dock.





## Step 3



- Use the flat end of the spudger to pry the lid off from the two connectors holding it to the body of the dock.

⚠ The connectors on the panel are fragile and may break.

## Step 4

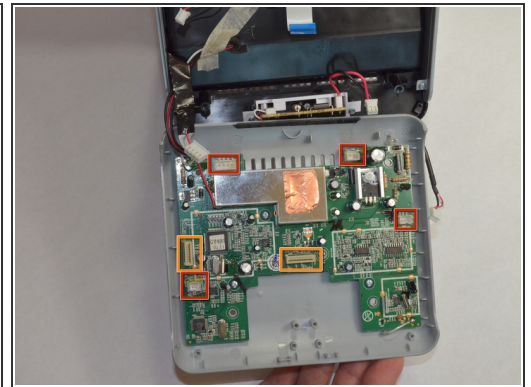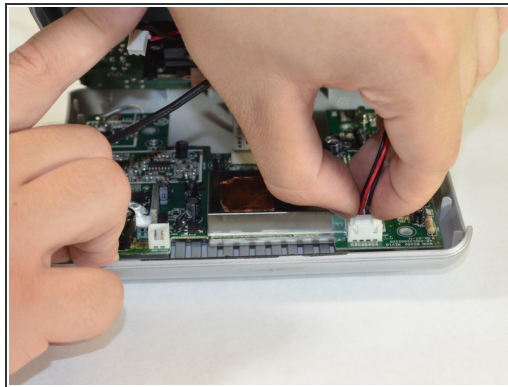

- Carefully pull up and out the four electrical connectors and the two ribbon connectors connecting the bottom panel and the dock.

- Electrical Connectors
- Ribbon Connectors

⚠ The cables do not have a lot of slack in them. Be careful not to break the connectors.

⚠ One wire is soldered onto the bottom panel. Be careful not to break this bond.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:55:24 PM.